


Water Tank Vent/Overflow


10" water column
creates sufficient
vacuum to
collapse tank

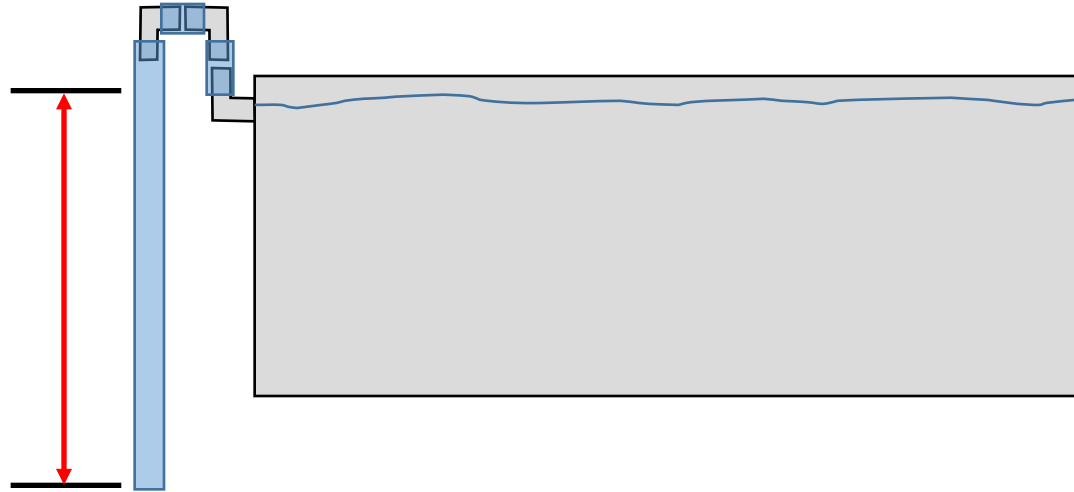

Rob Farrow
March 2021

Proposed Modification

Addition of a T and a second line
will solve the problem

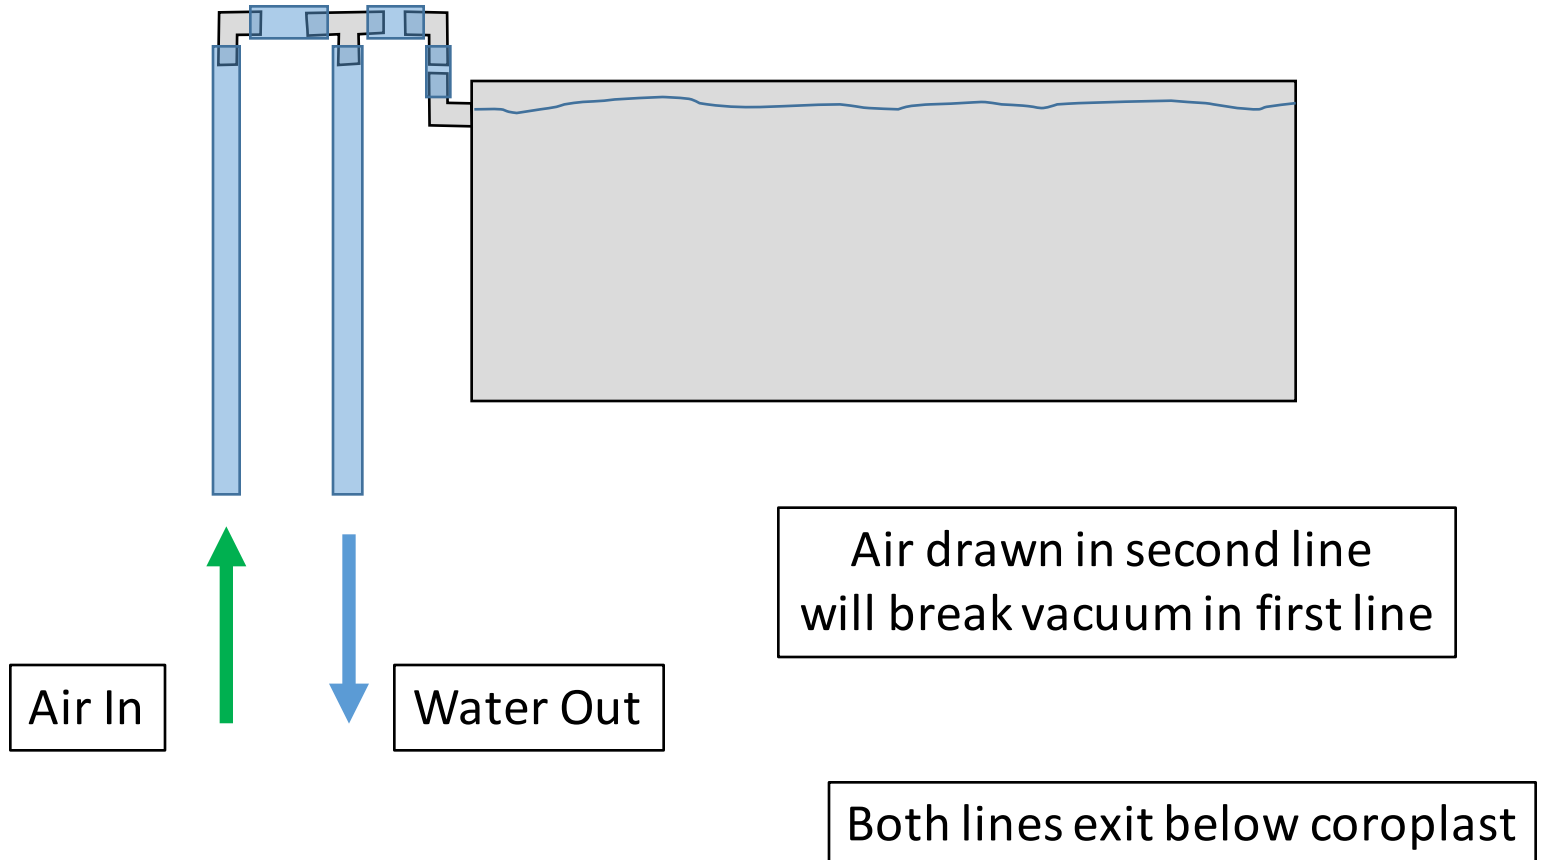

Air drawn in second line
will break vacuum in first line

Both lines exit below coroplast

Grand Design will
adopt this idea across
All Production
beginning May 2021

Retrofit to earlier builds
should be easy to
accomplish

Parts Required:
 $\frac{3}{4}$ " Pex Pipe
One T fitting
Four Pex Clamps

